


## Assembly Instructions for Clamping Morency Rests a Cafeteria Table: Mounting Clamp Bracket Model CTM

Parts Listing	Quantity	Diagram I.D.
Allen Wrench	1	Not Shown
Wooden Spacer	1	A
Angle Iron, Black	1	B
Clamp with bolts	2	C
Allen Head Screws	2	D

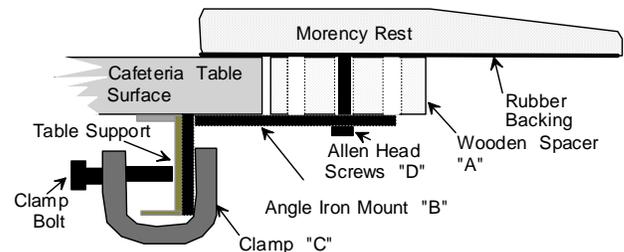

Verify that your package contains the parts listed above. If any parts are missing, please contact your distributor for replacements.

1. Pick up the angle iron mount (B). Slide it under the edge of the cafeteria table, with the hole side up, approximately where you desire the center of the Morency Rest. Use the 2 clamps (C) to attach the angle iron mount (B) to the table support. Be sure to place the bolts in the direction shown, away from the computer user. Tighten these two clamps using a 3/8" or adjustable wrench (not included).
2. Pick up the wooden spacer (A). Align one of the sets of holes with the holes in the angle iron mount. Use the holes that leave the least amount of space between the wooden spacer and the edge of the cafeteria table.
3. Remove the Morency Rest (not Included) from its packaging. Either the curved portion of the Curved Rest or the sloped side of the Straight Rest should be towards you for assembly.
4. Insert the one of the Allen head screws (D) into the holes of the metal plate, through the wooden spacer. Carefully place the rest over the angle iron mount, spacer and screw and start the screw into the appropriate insert in the bottom of the Morency Rest. Repeat this procedure for the second screw. Tighten the screws using the Allen wrench.
5. If desired, you can now align the Rest with the keyboard. Personal preference on exact location varies. Check for comfortable positioning prior to final tightening. Use a 3/8" or adjustable wrench (not included) to tighten the clamp bolts (C) when you are satisfied with the location of the Morency Rest.